

Fire Fighter 450-800L Operator's & Parts Manual



Contents

Introduction	3
Safety	4
Goldacres Warranty Statement	9
Terms & Conditions	10
General Information & Specifications.	12
Dimensions.	13
Vehicle Mounting	14
Start Up	14
Aussie Pump	15
Engine	16
Engine & Pump Troubleshooting.	20
Filling	21
Operation	21
Flushing	22
Storage	22
Fire Fighter 450-800L Assembly	23
Notes	25

Contact

Goldacres

1-3 Morang Crescent,

Mitchell Park Vic 3355

P: 03 5342 6399

F: 03 5342 6308

info@goldacres.com.au

Disclaimer

Any advice or recommendations given by Goldacres, Goldacres' dealers, or employees is given in good faith and provided based on the best information available to us. No liability or responsibility is accepted or implied as a result of any information or advice tendered in this operating manual or by Goldacres its agents or employees. The end user accepts all responsibility arising from that advice. No part of this manual may be reproduced without written permission from Goldacres. All photographs and technical information remain the property of Goldacres.

Introduction

Congratulations on your purchase of a Goldacres product. For more than a quarter of a century Goldacres has supplied Australian farmers with quality, innovative and technologically advanced spraying solutions - equipment designed in Australia for Australian conditions.

Goldacres not only produce Australia's finest range of spraying equipment - we also keenly value the unique relationship we enjoy with owners of our equipment. We are pleased to welcome you as a Goldacres owner and look forward to making your spray applications as efficient as possible.

Please use this comprehensive resource to gain a full understanding of your equipment, and don't hesitate to contact your Goldacres Dealer or Goldacres for further information.

A handwritten signature in black ink, appearing to read 'Roger Richards', written in a cursive style.

Roger Richards
General Manager

Safety

General

The following pages outline important safety information. At Goldacres safety is a high priority. These safety and warning instructions **MUST** be followed to ensure the safe operation of your Goldacres equipment.

Explanation of key terms used in this operator's manual are:

DANGER - You will be killed or seriously hurt if you don't follow instructions

WARNING - You can be seriously hurt if you don't follow instructions

CAUTION - You can be hurt if you don't follow instructions

NOTE - Is used to notify people of installation, operation or maintenance information that is important but not hazard related.

The Operator

All operators of this equipment should be adequately trained in the safe operation of this equipment. It is important that all operator's have read and fully understand the operators manual prior to using this equipment.

All new operators should be trained in an area without bystanders or obstructions and become familiar with the product prior to operation.

Safety Precautions

DANGER

- Do not use the pump in a gaseous or hazardous environment or near combustible material.
- Do not use the pump in an enclosed area, engine exhaust could build up and cause asphyxiation.
- Do not refuel engine while operating. Shut engine down before refueling.
- Always refuel in a well ventilated area, do not smoke or allow flames or sparks in the refuelling area or where gasoline is stored.
- Do not over fill fuel tank. Spilled fuel can ignite if it comes into contact with hot engine parts or sparks. After refueling,

make sure tank cap is closed properly and is secure.

- Do not pump hydrocarbons with this pump.

WARNINGS

- Keep clear of overhead obstructions.
- **CRUSH HAZARD** - Keep hands clear of moving parts.
- Any unauthorised modifications to this equipment may affect its function and create a serious safety risk.
- Never attempt to clean parts or nozzles, by blowing with mouth.
- Never attempt to siphon chemicals, or substances, by sucking.
- It is imperative that the vehicle manufacturer's specifications be checked and all instructions for use when transporting be adhered to at all times.
- Care should be taken when transferring liquid into the tank to ensure that the gross weight of the equipment does not exceed the carrying, braking and/or towing capacity of the vehicle to which the equipment is attached as specified by the vehicle manufacturer.

NOTE: 1 LITRE WATER = 1KG.

- Water weighs 1kg per litre, however conversion factors must be used when spraying liquids that are heavier or lighter than water. Example: liquid urea has a density of 1.28 kg/L and will therefore be significantly heavier than water if the tank is filled completely.
- Suitable care should be taken when driving with the equipment attached to the vehicle. Consideration should be given to both the carrying capacity of the vehicle and the gradient of the terrain when determining the speed at which the vehicle can be driven safely.
- Ensure that the maximum speed of the vehicle, when loaded, is within the vehicle manufacturers limitations.
- Ensure equipment is securely fastened, or attached to the vehicle at all times.

Continued over page

- Regularly check the pump mounting bolts. The pump will always vibrate to some degree when operating, and this may work the bolts loose.

CAUTIONS

- A supply of fresh water should be with the equipment at all times.
- Standard polyethylene tanks are not designed for use with diesel fuel or any flammable liquid.
- Do not use this machine in ambient temperatures exceeding 40 degrees Celsius.
- Ensure that all bolts are tightened and secured before operation.
- Area surrounding equipment may become slippery when wet.

NOTES

- Always read and understand the operator's manual prior to operation of this equipment.
- It is the responsibility of the operator to ensure that there are no decals missing from the equipment and that any damaged or missing decals are replaced prior to operation.
- Goldacres equipment ordered or operated, outside the guideline limitations may not be warranted by Goldacres for successful performance. Operators working outside these limitations do so at their own risk, unless specific advice has been sought from and provided by Goldacres in writing.
- Always read and follow the chemical manufacturer's guidelines for safe application as per the chemical label. Particular attention should be given to the recommended target application rate of the chemical being applied as per the chemical label.
- Inspect the equipment thoroughly for damage and wear before operation.
- Flush chemicals from equipment immediately after use.

- Certain chemicals may be unsuitable for use with Goldacres standard plumbing designs. Consult your Goldacres dealer if in doubt.
- Do not operate the equipment while under the influence of any drugs, alcohol or if excessively tired.
- Make sure that the equipment complies with all relevant road regulations when transporting.
- When draining fluids from the equipment use appropriate, leak proof containers. Do not use food or beverage containers as someone may consume the contents by mistake.
- After reading the operator's manual if there is any thing that you do not understand please contact your Goldacres dealer.

Safe Chemical Use

The safe use of Ag chemicals with this equipment is the responsibility of the owner/operators. All operators should be trained in the safe use of Ag chemicals. Goldacres suggest that a relevant course is completed by owners/operators prior to operation of this equipment as a spray unit.

Personal Protective Equipment (PPE)

Always wear close fitting clothing and safety equipment designed for the job.

Chemicals can be harmful to humans, appropriate PPE should be used when handling chemicals.

Always refer to the chemical manufacturers label for guidelines on the appropriate PPE to use with the chemicals you are using.

Goldacres also suggest that you read and understand the following Australian standards:

- Australian Standard for Chemical protective clothing AS3765
- Australian Standard for Respiratory protection devices AS1715

Continued over page

Airborne particles

Always stand well clear of equipment during operation. Any spray drift is dangerous and may be hazardous to humans and animals.

Fluids under pressure

Do not disconnect any hoses, nozzles or filters while equipment is operating. Disconnecting these components while under pressure may result in uncontrolled fluid discharge which may be hazardous.

When the repair is complete ensure that all fittings and lines are secured before re-applying pressure.

Cuts, Stabs & Punctures

When Servicing machine, be mindful of sharp edges on parts such as trimmed cable ties, hose clamps, cut reinforced hose and the edges of plates and brackets as they could cause cut, stab or puncture injuries.

Mount Vehicle Safety

- Consult your vehicle operator's manual before mounting this unit.
- Do not fit the spray tank to the front of your vehicle.
- Fully read the Owner's Manual before mounting this spray unit to vehicle.
- Before mounting to a vehicle ensure that fitment complies with weight restrictions as specified by vehicle manufacturer.
- Overloading the vehicle, or operating it improperly, may cause an accident, injury or death.
- Do not load the vehicle in excess of the load limit capacity of the vehicle as recommended by the manufacturer.
- Filling the spray tank when fitted to the vehicle will result in changes to the handling and stability of the vehicle.
- Vehicle tyres should be inflated to the manufacturers recommended operating pressures.
- Do not attach other equipment to the vehicle spray tank. This may exceed the vehicle spray tank's designed capacity and function.

- Reduce speed when operating the vehicle spray tank when tank is loaded.
- Allow for greater braking distances when the vehicle spray tank is loaded.
- To reduce possible vehicle instability it is recommended the vehicle be stationary if spot spraying on a slope or hill.
- Ensure the vehicle or vehicle complies with all relevant regulations for use on farm or public roads.
- The weight of the unit significantly increases when filled to the maximum recommended level. Remember: 1 litre of water = 1 kilogram.
- The tank should be empty during attachment or removal of the tank from the vehicle.
- Do not allow any other person to ride on the vehicle at the same time this vehicle spray tank is fitted.
- Do not allow use of this unit by minors.
- Do not use the unit in the vicinity of other people or animals.

DANGER: Failure to adhere to these recommendations or follow these rules may result in injury or death to the operator and/or bystanders.

Anyone involved in the use or operation of the vehicle and vehicle spray equipment should be aware of, and trained in appropriate safety recommendations including those contained in this manual.

Safety Decals

Understanding safety decals and their purpose assists in the safe operation of your Fire Fighter. Safety decals are there for your protection and it is the responsibility of the owner operator to replace damaged and/or missing safety decals.

Regularly review safety decals with operators. It is very important to ensure that all new machine components and replacement parts include current hazard identification decals.

Replacement safety decals can be ordered from all Goldacres dealers.

GA5064435 - Fire Fighter – Decal kit



Warranty

How to make a warranty claim

In the event of a fault or breakdown with your product, that you believe to be a warranty issue, the following steps must be taken.

1. Ensure that you have read the Operator's Manual and gone through the troubleshooting procedure.
2. If you continue to experience problems then please contact your local authorised Goldacres dealer. They will advise the method of warranty service for your product.

Warranty Duration

Goldacres' standard warranty is 12 months from date of purchase.

Warranty Inclusions

- Chassis
- Steel Boom Components
- Tanks
- Electrical wire and connectors, (non-contaminated)
- Consoles and controllers
- Electrical motors and drivers
- Wheels, tyres and rims
- Pins and bushes*
- Pump housing
- Hydraulics
- Axle frame only
- Shockers and dampeners
- Wire cables
- Springs
- Drive chains*
- Wheel bearings*
- Filters and filter screens
- Filter O-rings
- Chemical Hoses
- Solenoid Diaphragms
- Hand Gun, lance or wand seals and O-rings
- Consumables, chemicals, fuels
- Items controlled by or fitted to Non Genuine parts or devices
- Contamination or corrosion of components
- Hose reel seal sand O-rings
- Pressurised sprayer seals and O-rings
- Belts, couplings
- Adjustment of components
- Brake pads and components
- Globes / Bulbs
- Fuses
- Oil / fluids / filters (Unless contaminated or lost due to a warrantable failure)
- Boom break away tips
- Boom break away hinges
- Boom protectors
- Nozzles
- Nozzle Bodies
- Nozzle Body Brackets
- Nozzle Diaphragms and seals
- Wiper Blades
- Skid plates
- Wear plates
- Damaged items
- Worn or wearing items

*Failure caused by lack of lubrication not covered.

Warranty Exclusions

- Pump diaphragms
- Pump Seals
- Pump check valves
- Pump O-rings

Goldacres Warranty Statement

This warranty is the only warranty applicable to Goldacres new products (Products) and to the maximum extent as permitted by law, is expressly in lieu of any other conditions or warranties expressed or implied in relation to the Product.

In Australia, Goldacres Products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This Warranty gives you additional protection for your Goldacres product and identifies a preferred approach to resolving warranty claims which will be the quickest and simplest for all parties subject to the exclusions, terms and conditions below.

Goldacres warrants its authorized Dealers who in turn warrants the original purchaser (Owner) that each new Goldacres Product will be free from proven defect in materials and workmanship for twelve (12) months from the date of delivery to the first owner according to conditions outlined herein.

Subject only to legislative obligations to the contrary, Goldacres shall not be liable for incidental or consequential damage resulting from ownership or use of a Product.

Goldacres does not authorize any person to create for it any other obligation or liability in connection with these products.

The repair of the defective Product qualifying under this warranty will be performed without charge for labour and parts by any authorized Goldacres service outlet within a reasonable time following the delivery of the Product, at the cost of the owner, to the service outlet / place of business advised

Goldacres in its absolute discretion may choose to pay the cost of replacement or repair of the product.

If the Product will be repaired or replaced, using parts as supplied by Goldacres, repair may include, at Goldacres discretion, the replacement of parts with functionally equivalent remanufactured, reconditioned or new parts.

Goldacres may request failed parts to be returned to the factory.

Conditions of Warranty Coverage

The warranty covers only conditions resulting directly from defects in workmanship or materials used under normal use and service conditions.

The Warranty is not transferable.

The owner is responsible for the performance of regular maintenance and service as specified in the owner's / operators manual applicable to the

product. Failure to follow regular maintenance as advised may invalidate the warranty.

The owner must provide the Goldacres Dealer with prompt written notice of the defect (within 14 days of it occurring) and allow reasonable time for repair and/or replacement.

Goldacres warranty cover excludes:

- Claims resulting from misuse, use of incompatible chemical or fluids, exceeding the Product's specifications including overloading, impact damage, negligence, accidental damage or failure to perform recommended service or service intervals or use the Product with good care.
- Failure due to faulty or inadequate electrical sources of power. 12 volt power sources must be checked for suitability to operate the product.
- The time taken to remove and re-install warranted parts, products or components fitted to other than Goldacres brand products will not be covered by Goldacres Warranty. Only labour and parts directly attributable to the repair of the Goldacres unit is covered.
- The cleaning of parts or products before or after the warranty repair. Cleaning time is considered a customer expense.
- Any Goldacres Product which has been repaired by other than an authorized Goldacres dealer in a way which, in the sole and absolute judgment of Goldacres, adversely affects its performance or reliability.
- The replacement of maintenance items such as diaphragms, batteries, belts, etc.
- Loss of time, inconvenience, loss of use of the product, liability to third parties or any other consequential damages including damage to crops, profits or revenue, other commercial losses inconvenience or cost of rental or replacement equipment.
- Incidental costs associated with a warranty repair including any travel costs, out of hours labour charges, transportation costs, freight costs or any communications costs.
- Goldacres products purchased at auction or in used condition.

Procedure for claiming:

Claims must be made through a Goldacres Dealer. To make a claim under this Warranty, you should

- Contact your local Goldacres Dealer,
- Phone 1300 301 853 to locate a Goldacres Dealer.

Owners returning products to a Goldacres Dealer will require the original Dealer tax invoice, a copy of the tax invoice or delivery docket and any instruction manuals, information booklets or guides that were shipped with the Product.

Terms & Conditions

Interpretation

1. In terms and conditions:
- (1) "Goldacres" means Goldacres Trading Pty. Ltd. A.C.N. 061 306 732 trading as Goldacres Agricultural Equipment (its successors and assigns) which is the seller of the Goods;
- (2) "Purchaser" means the purchaser of the Goods;
- (3) "Goods" means the products and, if any, the services sold or provided by Goldacres to the Purchaser;
- (4) "GST Act" and "GST" are given the meanings referred to in a New Tax System (Goods and Services Tax) Act 1999.
- (5) "PPSA" means the Personal Property Securities Act 2009 (Cth) (as amended);
- (6) Nothing in these terms and conditions shall be read or applied so as to exclude, restrict or modify or have the effect of excluding, restricting or modifying, any condition, warranty, guarantee, right or remedy implied by law (including the Competition and Consumer Act 2010) and which by law cannot be excluded, restricted or modified.

General

2. (1) The Goods and all other products or services provided by Goldacres are provided subject to these terms and conditions. These terms and conditions and any terms and conditions incorporated herein by virtue of clause 3 hereto shall prevail over all other terms and conditions of the Purchaser or otherwise to the extent of any inconsistency.
- (2) These terms and conditions may not be modified or amended without the expressed written consent of Goldacres endorsed by the Managing Director of Goldacres Trading P/L.

Additional Terms and Conditions

3. From time to time Goldacres may provide additional or extended warranties in respect of certain goods and/or services. Where such additional or extended warranties are provided to a Purchaser in writing they will be incorporated into these terms and conditions provided that in the event of any inconsistency between these terms and conditions and the terms of any additional or extended warranty, the provisions of the additional or extended warranty shall prevail.

Goldacres quotations.

4. Unless previously withdrawn, Goldacres quotations are open for acceptance within the period stated therein or, when no period is stated, with 14 days only of the quotation date. Goldacres reserves the right to refuse any order based on any quotation within 7 days of receipt of the order.

Packing

5. The cost of any special packing and packing materials used in relation to the Goods shall be at the Purchaser's expense notwithstanding that such cost may have been omitted from any quotation.

Shortage

6. The Purchaser waives any claim for shortage of any Goods delivered if a claim in respect thereof has not been lodged with Goldacres within (7) seven days from the date of receipt of the Goods by the Purchaser.

Specifications, etc: Catalogues, etc: Quantities

7. All specifications, (including but not limited to: drawings, particulars of weights, volumes, capacities, dimensions, load factors) are approximate only and any deviation shall not be taken to vitiate any contract with Goldacres or form any claim against Goldacres. The descriptions, illustrations, and performances contained in catalogues, price lists and other advertising matter do not form part of the contract of sale of the Goods. Where specifications, drawings or other particulars are supplied by the Purchaser, Goldacres' price is made on estimates of quantities required. Should there be any adjustments in quantities above or below the quantities estimated by Goldacres and set out in a quotation, then any such increase or decrease shall be adjusted on a unit rate basis according to unit prices set out in the quotation.

Performance, Capacities, Chemicals, Liquids, Application Methods, Environmental Effects

8. Any performance, volumes, and/or capacity figures given by Goldacres are estimates only. Goldacres shall be under no liability for damages for failure to obtain such figures unless specifically guaranteed in writing and any such written guarantee shall be subject to the recognised tolerances applicable to such figures. The suitability of chemicals and other liquids for any application and the application methods and the environmental effects shall be the sole decision and responsibility of the Purchaser and the user of the Goods. Goldacres gives no warranty as to the suitability of any chemicals or other liquids for any application, nor the application methods nor the environmental effects, which may result from the use of the Goods. Goldacres shall be under no liability for damages arising out of the use of any chemicals, liquids, or mixtures in the Goods nor for any application, nor for the application methods nor for the environmental effects, which may result from the use of the Goods.

Delivery/Service Times

9. The delivery times and service times made known to the Purchaser are estimates only and Goldacres shall not be liable for late delivery, non-delivery or delay and under no circumstances shall Goldacres be liable for any loss, damage or delay occasioned by the Purchaser or its customers arising from the late or non-delivery or late installation of the Goods.

Loss or damage in transit

10. Goldacres is not responsible for any loss or damage to Goods in transit. Goldacres shall provide the Purchaser such assistance as may be necessary to press claims on carriers provided that the Purchaser shall have notified Goldacres and the carriers immediately the loss or damage is discovered on receipt of Goods and shall lodge a claim on the carrier within three days of the date of receipt of the Goods. Insurance of Goods in transit is the responsibility of the Purchaser.

Limit of Liability

- (1) Goldacres liability for Goods manufactured by it is limited to:
 - (a) where the law implies consumer guarantees into these terms and conditions pursuant to Part 3.2 Division 1 of Schedule 2 to the Competition and Consumer Act 2010 (C"th") ("consumer guarantees") which cannot be excluded and Goldacres breaches a consumer guarantee, the loss and damage the Purchaser is entitled to at law which cannot be excluded by these terms and conditions;

and, in all other cases

- (b) making good any defects by repairing the same or at Goldacres option by replacement within a period not exceeding either 1000 hours or twelve calendar months, whichever comes first, after the Goods have been dispatched provided that:
 - (i) the defects have arisen solely from faulty materials or workmanship;
 - (ii) the Goods have not received maltreatment inattention or interference;
 - (iii) accessories of any kind used by the Purchaser are manufactured or approved by Goldacres;
 - (iv) where applicable, the seals on the Goods remain unbroken;
 - (v) there has been no improper adjustment, calibration or operation;
 - (vi) the use of accessories including consumables, hardware or software (not manufactured by Goldacres) has been approved in writing by Goldacres;
 - (vii) no contamination or leakage has been caused or induced;
 - (viii) any modification to the Goods have been authorised in writing by Goldacres;
 - (ix) there has been no inadequate or incorrect use, storage, handling or application of the Goods;
 - (x) there has been no use or operation of the Goods outside of the physical, electrical or environmental specifications of the Goods;
 - (xi) there has been no inadequate or incorrect site preparations;
 - (xii) there has been no inadequate or improper maintenance of the Goods;
 - (xiii) it has not been caused by fair wear and tear; and
 - (xiv) firstly the Goods have been thoroughly inspected and any damage (from whatever cause) to the Goods (and in particular – the structure, welding, seams, bolts, booms) has been repaired prior to the Goods being operated, used, stored or moved and on each occasion the tanks are filled; and
 - (xv) there has been no failure to comply with the requirements of all present or future laws or regulations relating to the Goods and/or the use and/or the operation of the Goods; and there has been no failure to maintain a record of hours of operation (which record shall contain full details of all inspections, repairs and maintenance) and produce same to Goldacres at the time of the claim;
 - (xvii) the defective Goods or any damaged part of the Goods are promptly returned free of cost to Goldacres or a representative of Goldacres;
 - (xviii) all warranty related repairs have been carried out with the prior authorisation of Goldacres;
- (2) If Goods or any part thereof are not manufactured by Goldacres, in particular engines, engine accessories, transmissions, transfer cases, differentials, tyres, tubes, batteries, radios and UHF's, the guarantee of the manufacturer thereof shall be accepted by the Purchaser and is the only guarantee given to the Purchaser in respect of the Goods or that part provided always that this clause does not seek to exclude the consumer guarantees;
- (3) In the case of hydraulic systems, Goldacres shall replace defective parts in accordance with clause 11(1) of these conditions, provided that the failure of the part was not related to contamination within the system. Goldacres shall not be liable for labour in the case of repairing hydraulic system defects;
- (4) Goldacres will not accept liability for damage attributed to fair wear and tear including but not limited to fair wear and tear to nozzles, chains, belts, filters, brake pads, polyethylene bushes and liquid pump valves, valve O-rings, diaphragms and seals;
- (5) Goldacres shall not be liable for and the Purchaser releases Goldacres from any claims in respect of faulty or defective design of any Goods supplied unless such a design has been wholly prepared by Goldacres and the responsibility for any claim has been specifically accepted by Goldacres in writing and in any event Goldacres liability hereunder shall be strictly limited to the replacement of defective parts in accordance with paragraph 11(1) of these conditions provided always that this clause does not seek to exclude the consumer guarantees;
- (6) Except as provided herein, all express and implied warranties, guarantees and conditions under statute or general law as to the merchantability, description, quality, suitability or fitness of the Goods for any purpose or as to design, assembly, installation, materials or workmanship or otherwise are hereby expressly excluded and Goldacres shall not be liable for physical or financial injury, loss or damage or for consequential loss or damage of any kind arising out of the supply, layout, assembly, installation or operation of the Goods or arising out of Goldacres negligence or in any other way whatsoever;
- (7) The benefit of any warranty provided under these terms and conditions shall only be available to the Purchaser and shall not be transferable by the Purchaser;
- (8) The warranties provided under these terms and conditions do not extend to second hand or used Goods that may be sold by Goldacres.
12. Goldacres liability for breach of a consumer guarantee is hereby limited (in the case of goods and services not used for personal, domestic or household purposes) to:
 - (1) in the case of Goods, any one or more of the following:
 - (a) the replacement of the Goods or the supply of equivalent Goods;
 - (b) the repair of the Goods;
 - (c) the payment of the cost of replacing the Goods or acquiring the equivalent Goods;
 - (d) the payment of having the Goods repaired; or
 - (2) in the case of services;
 - (a) the supplying of the services again; or
 - (b) the payment of the cost of having the services supplied again.
- Prices
13. (1) Unless otherwise stated in writing by Goldacres, all prices quoted by Goldacres are inclusive of GST for supplies within Australia and exclusive of GST for exports outside of Australia. Prices quoted are those ruling at the time of quotation or the date the price is given and are based on rates of freight, insurance, customs, duties, taxes, exchange, shipping expenses, sorting and stacking charges, cartage, cost of materials and other charges affecting the cost of production ruling on that date and any alterations thereto either before acceptance of or during currency of the contract shall be to the Purchaser's account.
- (2) For the purpose of 38-185 of the GST Act, the day upon which the seller gives the

invoice for the supply shall be the date of the invoice.

Payment

14. (1) The purchase price in relation to the Goods and the cost of the service shall be payable without deduction and or set off and payment thereof shall be made on or before the thirtieth day of the month following the delivery of the Goods or performance of the services unless other terms of payment are expressly stated in writing.
- (2) A decreasing or increasing adjustment and or the issuing of an adjustment note, pursuant to Division 21 and Division 29-C of the GST Act, shall not, in any way, constitute a release, waiver, and or forgiveness of the debt incurred by the Purchaser.

Interest on overdue payments

15. If Goldacres is not paid for any Goods or services on the due date specified in this agreement without prejudice to any other right or remedy, all outstanding money shall bear interest at the rate set, pursuant to the Penalty Interest Rates Act, Victoria, 1986, as such money, together with interest shall be recoverable forthwith from the Purchaser.

Rights in relation to Goods.

16. (1) At all times until the Debts have been paid in full the Purchaser shall be responsible for any loss or damage occasioned to the supplied Goods howsoever occasioned on a strict liability basis and shall indemnify Goldacres against any such loss or damage and shall insure and keep insured the Goods in the name of both the purchaser and Goldacres against such loss or damage to the full extent of the purchase price and shall provide a copy of such Insurance Policy to Goldacres.
- (2) The Purchaser shall have the right to resell Goods but only as fiduciary agent and trustee for Goldacres by way of bona fide sale at full market value and in the ordinary course of its business.
- (3) Until all the Debts have been paid in full:
 - (a) the Purchaser shall take custody of the Goods as trustee, fiduciary agent and bailee for Goldacres;
 - (b) the Purchaser shall keep the Goods separate from any other goods and properly marked, stored, protected and insured;
 - (c) the Purchaser must hold all of the money it receives ("Proceeds");
 - (d) from the sale of any property into which Goods supplied have been incorporated; and
 - (e) from the sale of Goods or provision of services including the Goods supplied by the Goldacres as bailee, fiduciary agent and trustee for Goldacres, but the Purchaser need not hold on trust any money exceeding the amount of the Debts at the time the money is received.
- (4) The Purchaser expressly acknowledges that it is bound by the fiduciary obligation created in the preceding paragraph and acknowledges that:
 - (i) it must hold the Proceeds on trust for Goldacres;
 - (ii) it must place the whole of the Proceeds in an account separate from its own moneys (the "Proceeds Account");
 - (iii) it must maintain the Proceeds Account separate from its own moneys at all times.
 - (iv) it must maintain proper records for the Proceeds Account.
 - (v) it must not assign or encumber any book debts arising from sales made in circumstances set out in clauses 16(i)(j) and (ii) or do any other act in derogation of Goldacres' legal or beneficial interests; and
 - (vi) it must account to Goldacres on demand for all moneys standing to the credit of such account.
- (5) For the purposes of identification of different consignments of Goods purchased from Goldacres and receipt of Proceeds, the Purchaser agrees that the principle of "Last In, First Out" shall be applied to any items that cannot be distinguished.
- (6) Goldacres may trace the Proceeds in equity.

- (4) Goldacres may at any time, without notice to the Purchaser and without prejudice to any other rights which it may have against the Purchaser, terminate any contract connected with the Goods and the bailment referred to in clause 16(3) and enter upon any premises owned or occupied by the Purchaser where Goldacres reasonably believes the Goods may be stored, and repossess the Goods without liability for any damaged caused, and subsequently dispose of the Goods at Goldacres' discretion if:
 - (a) the Debts are not paid in accordance with these terms and conditions or any other contract or arrangement between Goldacres and the Purchaser; or
 - (b) Goldacres receives notice of or reasonably believes that:
 - (i) a third person may attempt to levy execution against the Goods; or
 - (ii) the Purchaser is insolvent (within the meaning of the Corporations Act 2001) or bankrupt; or
 - (iii) the Purchaser has entered into any arrangement or composition with its creditors, gone into liquidation, or has appointed a receiver, a receiver and manager or administrator.

- (5) If after repossession under clause 16(4) Goldacres sells the Goods, Goldacres shall account to the Purchaser for any proceeds of sale (less expenses of repossession and sale) that exceeds the amount of the outstanding Debts.
- (6) If any Goods belonging to Goldacres are disposed of by the Purchaser or an insurance claim is made in respect of them, Goldacres shall be entitled to trace the sale or insurance proceeds, which proceeds shall be held by the Purchaser in a separate bank account on trust for Goldacres.
- (7) The Purchaser agrees and acknowledges that in the event it sells Goods to a third party on account, it will include in its terms and conditions of sale a provision under which the Purchaser retains title to the Goods until such time that the total amount due in respect of the Goods and all monies owing to the Purchaser have been paid in full by that third party debtor. The Purchaser also agrees and acknowledges that in these instances, it will register its PMSI in accordance with the PPSA in respect of its security interest in the Goods.

PPSA provisions

17. (1) The Purchaser acknowledges that these terms and conditions constitute a security agreement for the purposes of section 20 of the PPSA and that a security interest exists in all Goods (and any associated Proceeds from their sale) previously supplied by Goldacres to the Purchaser (if any) and in all future Goods (and any associated Proceeds from their sale) that may be supplied to the Purchaser by Goldacres.
- (2) The Purchaser acknowledges that Goldacres has a first ranking purchase money security interest ("PMSI") (as defined in section 14 of the PPSA) in the Goods and the Purchaser must not jeopardise such ranking (whether by act or omission).
- (3) The Purchaser acknowledges that it has received value as at the date of first delivery of the Goods and has not agreed to postpone the time for attachment of the security interest (as defined in the PPSA) granted to Goldacres under these terms and conditions.

- (4) The Purchaser will execute documents and do such further acts as may be required by Goldacres to register the security interest granted to Goldacres under these terms and conditions under the PPSA.
- (5) Until ownership of the Goods passes, the Purchaser must not give to Goldacres a written demand or allow any other person to give Goldacres a written demand requiring Goldacres to register a financing change statement under the PPSA in respect of Goldacres' interest in the Goods.
- (6) The Purchaser must indemnify Goldacres and on demand reimburse Goldacres for all costs and expenses incurred by Goldacres in respect of these terms and conditions including but not limited to Goldacres registering its security interest in the Goods, lodging, discharging or amending any financing statement or financing change statement, or otherwise complying with the PPSA.
- (7) The Purchaser agrees (other than as provided in these terms and conditions) not to sell, lease, mortgage, deal with, dispose of or create or attempt to create any other security interest in or affecting the Goods unless and until the Purchaser's Debts have been satisfied:
 - (a) The Purchaser waives its rights under the following provisions of Chapter 4 of the PPSA:
 - (a) to receive a notice on enforcement action against liquid assets (section 121(4)),
 - (b) to receive a notice to seize collateral (section 123),
 - (c) to receive a notice of disposal of Goods by Goldacres purchasing the Goods (section 129);
 - (d) to receive a notice to dispose of Goods (section 130);
 - (e) to receive a statement of account following disposal of Goods (section 132(2));
 - (f) to receive a statement of account if no disposal of Goods for each 6 month period (section 132(4));
 - (g) to receive notice of any proposal of Goldacres to retain Goods (section 135(2));
 - (h) to object to any proposal of Goldacres to either retain or dispose of Goods (section 137(2));
 - (i) to redeem the Goods (section 142);
 - (j) to reinstate the security agreement (section 143);
 - (k) to receive a notice of any verification statement (section 157(1) and section 157(3));
- (8) The rights Goldacres may have under the PPSA are supplementary and in addition to those set out in these terms and conditions and do not derogate from the rights and remedies of Goldacres under these terms and conditions or under any other statute or under general law.
- (10) The Purchaser must give 10 business days prior written notice of any proposed change in the Purchaser's name or other identifying characteristics and details.

Purchasers property

18. Any property of the Purchaser under Goldacres' custody or control shall be entirely at the Purchaser's risk as regards loss or damage caused to the property or by it.

Storage

19. Goldacres reserves the right to make a reasonable charge for storage if delivery instructions are not provided by the Purchaser within (14) fourteen days of a request by Goldacres for such information.

Returned Goods

20. Goldacres shall not be under any obligation to accept Goods returned by the Purchaser and will do so only on terms to be agreed in writing in each individual case.

Goods sold

21. All Goods to be supplied by Goldacres shall be described on the purchase order agreed by Goldacres and the Purchaser and the description on such purchase order modified as so agreed shall prevail over other descriptions including any Purchaser's specification or enquiry.

Cancellation

22. No order may be cancelled except with the consent in writing and on terms, which will indemnify Goldacres against all losses.

No waiver

23. The failure of any party to enforce the provisions of these terms and conditions or to exercise any rights expressed in these terms and conditions shall not be a waiver of such provisions or rights and shall not affect the enforcement of this agreement. The exercise by any party of any of its rights expressed in this agreement shall not preclude or prejudice such party from exercising the same or any other rights it may have irrespective of any previous action taken by that party.

Force Majeure

24. If by reason of any fact, circumstance, matter or thing beyond the reasonable control of Goldacres is unable to perform in whole or in part any obligation under these terms and conditions then Goldacres shall be relieved of that obligation under these terms and conditions to the extent and for the period that it is so unable to perform and shall not be liable to the Purchaser in respect of such inability.

Passing of risk

25. Risk in the Goods shall pass to the Purchaser upon delivery of the Goods to the Purchaser or collection of the Goods by the Purchaser's agent or carrier as the case may be.

Exclusion of liability

26. To the extent permitted by law Goldacres shall not be liable to the Purchaser in contract or in tort arising out of, or in connection with, or relating to, the performance of the Goods or any breach of these conditions or any fact, matter or thing relating to the Goods or any error (whether or not it is negligent or a breach of contract) in information supplied to the Purchaser or a user before or after the date of the Purchaser's or user's use of the Goods and Goldacres shall be under no liability for damages arising out of the use of any chemicals, liquids, or mixtures in the Goods, nor for any application, not for the application methods nor for the environmental effects, which may result therefrom or from the use of the Goods.

Exclusion of representations and arrangements

27. To the extent permitted by law the terms and conditions supersede and exclude all prior and other discussions, representations (contractual or otherwise) and arrangements relating to the supply of the Goods or any part thereof including, but without limiting the generality of the foregoing, those relating to the performance of the Goods or any part thereof or the results that ought to be expected from using the Goods.

Place of contract

28. The contract for sale of the Goods and the provision of the services is made in the State of Victoria and the Purchaser agrees to submit all disputes arising with Goldacres to the courts of such State and any court competent to hear appeals therefrom.

General Information & Specifications

The Fire Fighter products are ideal for small acreage and hard to get areas. They feature a 5.5 HP engine driven centrifugal pump with a maximum flow of 450 L/min and maximum head of 75 m.

The 20 metre hose reel is fitted with a quality pistol grip spray gun with adjustable nozzle.

Know Your Product

Getting to know your Fire Fighter prior to operation is crucial in the safe and efficient operation of this equipment. Take the time to familiarise yourself with all the standard and optional components fitted, not only do you need to know where key components are located, you need to become competent in the correct usage of these components prior to operation.

Tank

All tanks are constructed from UV resistant polyethylene. Polyethylene tanks have a very high chemical resistance.

Due to the rotomoulding process, there can be a variance in the overall dimensions of the tank which in turn results in variations to the tank capacity. For this reason, calibration markings should be used as a guide only.

Pump

The pump is critical to product performance. Correct operation and maintenance of the pump will ensure the unit is able to perform to its full capabilities.


Always flush pump with clean water after every use. Prolonged chemical contact can severely seals.

Machine limitations


All Goldacres equipment is subject to operating limitations, it is the operator's responsibility to ensure that this equipment is being operated within these limitations and appropriately to the operating conditions at hand.

Identification

When ordering parts or requesting service information for your product, it is important to quote the serial number and the purchase date. This will assist with receiving the most accurate information. The location of the stamped ID plate is shown below.

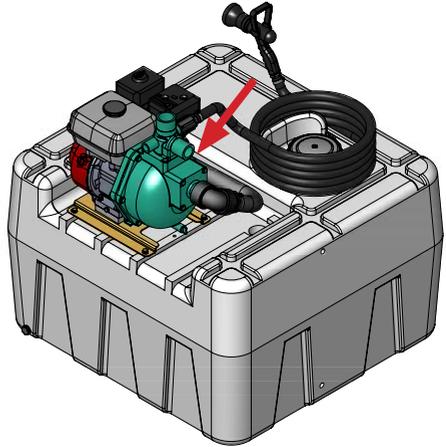




Dimensions

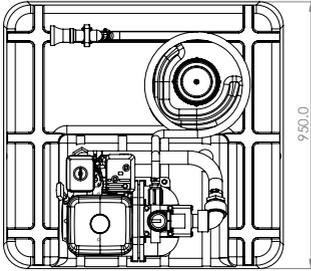

450L

Tare Weight: 60 KG



Gross Weight: 510 KG

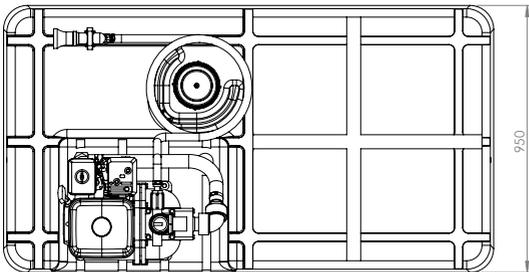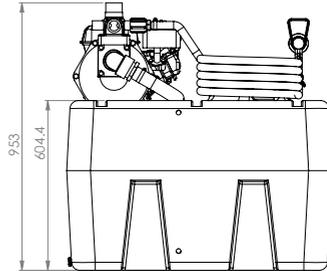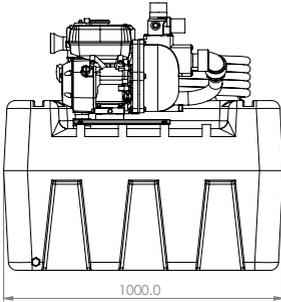

800L

Tare Weight: 90 KG

Gross Weight: 890 KG

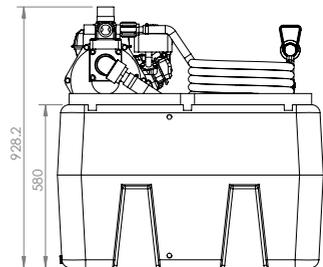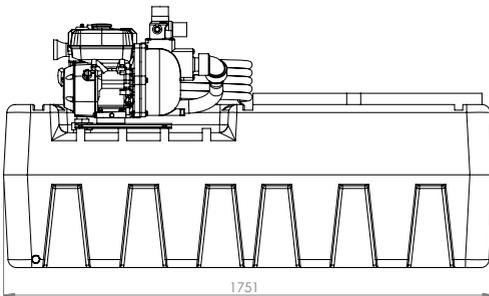

NOTE: Dimensions & weights are approximate only. May be subject to change without notice.

Unit Transport

Make sure the vehicle has sufficient lifting and braking capacity to carry the unit.

All relevant transport regulations must be adhered to when transporting the unit i.e. speed regulations, oversize signs, flashing light, etc. It is the operator's responsibility to know the relevant regulations. Make sure the unit is securely attached to the vehicle.

CAUTION: Take care when reversing the vehicle with the Fire Fighter mounted. If driver visibility is restricted use another adult with a clear view to the rear of the vehicle to give reversing directions.

CAUTION: It is the operator's responsibility to know the tare weight and gross weight of the unit.

Contact Goldacres dealer to ascertain a more precise tare weight for your unit if unsure. If any alterations are made to the unit, it is the operator's responsibility to know the tare weight and the gross weight of the modified unit at all times.

Vehicle Mounting

The Fire Fighter has been designed for carrying by a suitably rated vehicle.

WARNING: Read and understand the vehicle mounting safety section at the beginning of this manual.

1. Remove from pallet (if attached) and position on a solid, flat surface.
2. Use a forklift, or other suitably rated lifting device, to lift the unit to a height suitable for the vehicle.
3. Mount the Fire Fighter to your vehicle.

Use the reverse of the procedure above to remove from the vehicle.

Start Up

CAUTION: Before using this equipment with a chemical mix, read and understand the instructions on the chemical label. A first time start up procedure should be carried out as a water test only without any chemical present in the tank.

1. Inspect the unit to ensure there is no damage or wear which could lead to injury, further damage or reduce its performance.
2. Check all bolts and nuts to make sure they are tight and secure.
3. Make sure the unit is securely attached to the vehicle
4. Ensure all filters and nozzles are clean.
5. Check that there are no air leaks in the suction line and that rubber gaskets are in good condition.
6. Fill main tank with approximately 20% or more of total tank volume of fresh water.
7. Remove the priming cap at the top of the delivery port on the pump. Fill pump body with water and refit priming cap tightly.
8. See engine section. Start the engine at the lowest revs possible and then gradually increase revs until the full operating speed is reached.
9. Allow up to 3 minutes to prime.
10. Check all other components are operating correctly and make any adjustments as necessary.

IMPORTANT: Never attempt to operate pump without priming first. Extended dry operation will destroy pump seal. If pump has been run dry, stop the engine immediately and allow it to cool before adding priming water.

Aussie Pump

The pump supplied on these units is a centrifugal type with a maximum flow of 450 L/min and maximum head of 75 m. It is mated to a Honda GX160 petrol motor with a power output of 5.5 HP.

Hydraulic Shock

If the water flow is suddenly terminated by closing a valve without stopping the pump first, it can cause hydraulic shock. This can travel back to the pump causing serious damage. To prevent pump damage turn valves slowly.

Cavitation

Your pump is cavitating if knocking noises and vibrations can be heard when it is operating. If you continue to operate your pump when it is cavitating, it will be damaged.

How to avoid cavitation

- Minimise the number of valves and bends in suction line
- Suction length should be as short as possible
- Suction pipe should be at least the same diameter as the pump inlet connection
- Use long radius bends
- Do not allow air into the suction line
- Ensure adequate submergence, at least 5.3 times the suction hose diameter

Pump Performance

- For maximum performance, efficiency and life, operate the pump at the best efficiency point which is 85% of total pump head (75 m).
- To maximize pump life, drain pump after use and flush out with clean, fresh water.
- Read engine manufacturer's owner's manual thoroughly and service as recommended.
- Store pump in a dry, safe location when not in use.
- Aussie Quik Prime pumps are specifically designed to pump water. Pumping other liquids may shorten life and impact on warranty.

- Pumping water containing solids will prematurely wear pump components, and may impact warranty.
- Ensure that the correct size strainer is installed on the suction hose at all times, even on trash pumps.

Aussie QP 5 year warranty

Australian Pump warranties all Aussie QP self priming centrifugal pumps, whether used for domestic or commercial applications, to be free of faulty workmanship or material for a period of 5 years from the date of supply to the end user.

Aussie will replace or repair, at their discretion, any faulty pump free of charge subject to the following conditions:

Engine Warranty

Warranty for engines fitted to Aussie Pump products is the responsibility of the engine manufacturer or his representative and subject to their terms and conditions, and operating instructions included with the product.

The Aussie Pump 5 year warranty naturally does not cover the following:

1. Normal wear and tear, misuse, improper installation, negligent handling, failure to follow operating instructions or to carry out maintenance.
2. Pumping of chemicals, salt or corrosive fluids.
3. Unauthorised repair or attempted repair (i.e. not authorised by Australian Pump)
4. Shipping or transit damage
5. Use of non-genuine parts.

The warranty is valid only for the original consumer purchaser and non transferable.

NOTE: This warranty is limited to the cost of the product and does not include third party costs including pump installers, plumbers etc. Unless expressly authorised by Australian Pump Industries in writing.

Contact your Goldacres Dealer to arrange a warranty claim.

Engine

The Fire Fighter is fitted with a Honda GX160 motor as standard. It may be optioned with an electric starter. This section provides a basic overview of motor features and operation only. For detailed safety, operating and maintenance instructions specific to this motor consult the Honda owner's manual supplied or find a copy online.

Engine Safety

- Understand the of all controls and learn how to stop the engine quickly in case of emergency.
- Do not allow children to operate the engine. Keep children and pets away from the area of operation.
- Your engine's exhaust emits poisonous carbon monoxide. Do not run the engine without adequate ventilation, and never run the engine indoors.
- The engine and exhaust become very hot during operation. Keep engine away from flammable materials and do not place anything on engine while it is running.

Preoperational Safety Check


1. Look around the underside of the engine for signs of any oil or fuel leaks.
2. Remove any excessive dirt or debris, especially around the muffler and recoil starter.
3. Look for signs of damage.
4. Check that all shields are in place, and that all nuts, bolts and screws are tightened.

Preoperational Maintenance Check

1. Check engine oil level. Running with low oil can cause damage.

Where fitted, the oil alert system will automatically stop the engine before the oil level becomes critically low.

2. Check reduction gearbox oil level. Sufficient oil level is essential to maximise gearbox life.
3. Check air filter element and clean or replace as necessary to allow clear airflow to the carburetor.

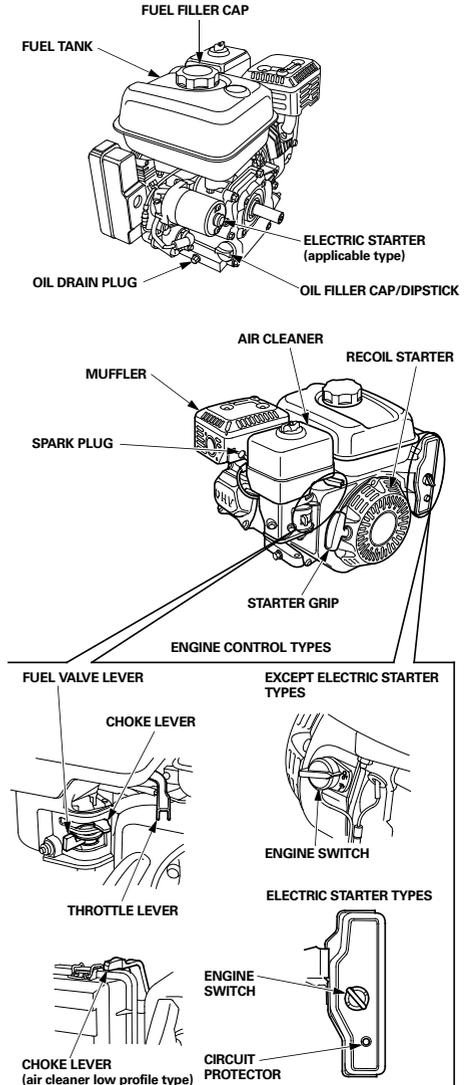


Circuit Protector

If the motor has been optioned with electric start, then it will also have a circuit protector fitted which protects the battery charging circuit. A short circuit, or a battery connected with reverse polarity, will trip the circuit protector.


The green indicator inside the circuit protector will pop out to show that the circuit protector has switched off. If this occurs, determine the cause of the problem, and correct it before resetting the circuit protector.

Push the circuit protector button to reset.

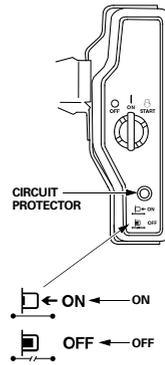


Starting Engine

1. Move the fuel valve lever to the ON position.

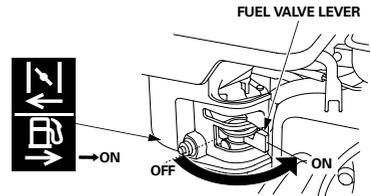


2. If the engine is cold, move the choke lever to the CLOSED position.

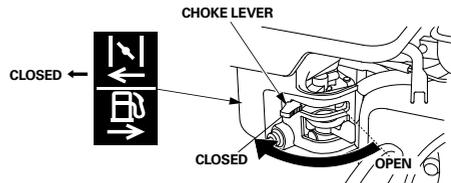


If restarting a warm engine, leave the choke lever in the OPEN position.

3. Move the throttle lever approximately 1/3 of the way from the MIN. position.

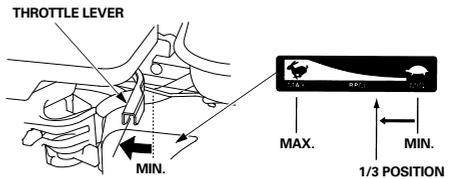

4. Turn the engine switch to the ON position.

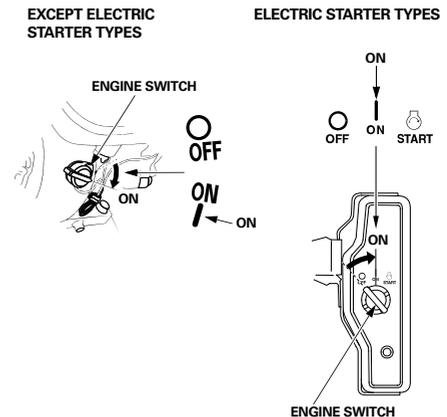


5. Operate the starter:

RECOIL STARTER

- Pull the starter grip lightly until you feel resistance, then pull briskly in the direction of the arrow as shown below. Return the starter grip gently.


NOTE: Do not allow the starter grip to snap back against the engine. Return it gently to prevent damage to the starter.

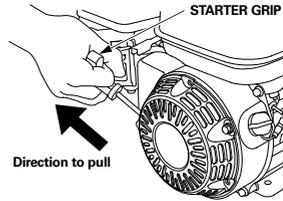


ELECTRIC STARTER

- Turn the key to the START position, and hold it there until the engine starts.
- When it starts, release the key, allowing it to return to the ON position.

NOTE: Using the starter for longer than 5 seconds at a time will overheat the motor and can damage it. This type of overheating is not covered under warranty. If the engine fails to start within 5 seconds, release the key, and wait at least 10 seconds before trying the starter again.

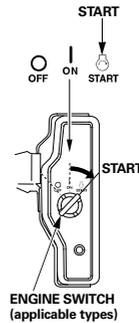


6. If the choke lever was moved to the CLOSED position to start the engine, gradually move it to the OPEN position as the engine warms up.

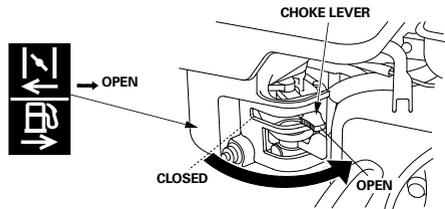


Setting Engine Speed

Move the throttle lever to somewhere between the MAX. and MIN. position to set desired engine speed.

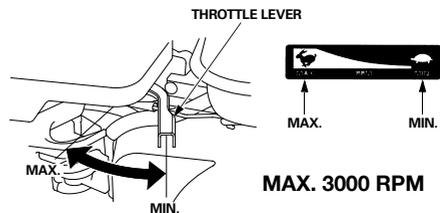


Stopping Engine


1. Move the throttle lever to the MIN. position.

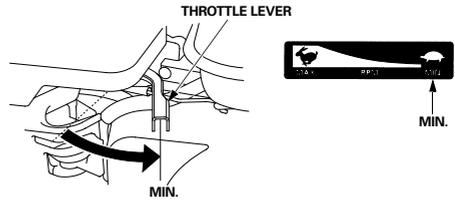

2. Turn the engine switch to the OFF position.

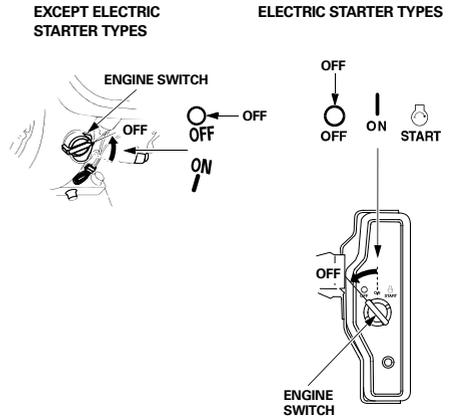

3. Move the fuel valve lever to the OFF position.

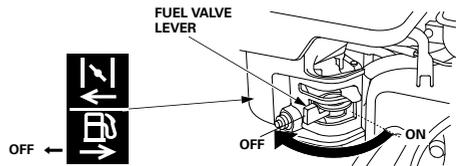

EMERGENCY SHUTDOWN: Turn the engine switch to the OFF position.

The full shutdown procedure should be followed during normal operation.

Engine & Pump Troubleshooting

The troubleshooting information is provided as a reference when your Fire Fighter is not functioning correctly.

To ensure that you receive the best possible service, it is recommended that you exhaust all applicable troubleshooting solutions shown prior to calling your dealer, or Goldacres, for service advice.

Symptom	Possible Problem	Solution
Pump does not take on water	Not enough priming water in the housing	Add water
	Engine speed too low	Increase throttle
	Strainer plugged	Clean strainer
	Suction hose damaged	Replace or repair hose & clamps
	Air leak at suction port	Check that fittings are tight & sealed
	Pump is located too high above water line	Move pump closer to water
	Debris collecting in pump housing	Clean pump housing
	Too much distance between impeller and volute	Adjust clearance by adding shims or replace impeller. Min. .010" -Max. .020
	Water leaking out weep hole between pump and engine	Check condition of mechanical seal & gaskets, between pump end and engine housing
Pump takes in water, little or no discharge	Suction lift or discharge head too high	Check hose/pipe installation
	Engine speed too low	Increase throttle speed
	Suction strainer partially plugged	Clean strainer
Suction hose leaks at inlet	Impeller/volute worn	Adjust clearance by adding shims or replace impeller/volute
	Fittings/clamps are not sealed properly	Tighten, replace or add clamp. (Keep extra seals on pump)
Discharge hose does not stay on coupling	Hose diameter is too large	Use smaller diameter hose or replace hose
	Pressure too high	Check pressure, add additional clamp
Impeller does not turn, pump is hard to start	Hose kinked or end blocked	Check hose
	Impeller jammed or blocked	Open pump cover and clean dirt and debris from inside housing
	Impeller and volute binding	Adjust clearance by removing shim from behind impeller

Filling

When filling the Fire Fighter it is necessary to use an external water source and wear the appropriate PPE when adding any chemicals. The following steps should be followed when filling the tank with water only:

1. With Fire Fighter mounted to vehicle, park on level ground.
2. The motor & pump should be turned off.
3. Remove the tank lid.
4. Use external water source to fill main tank (Do not exceed the tank capacity).
5. Replace the tank lid and ensure that it is secure prior to switching on pump. You are now ready to use the Fire Fighter.

Operation

NOTE: It is the responsibility of the operator to ensure that any chemical mix is sufficiently agitated and that the conditions are right to start spraying. Operators must wear the appropriate PPE.

1. Follow the safety check and start up procedure for the pump motor.
2. Fill main tank with approximately 20% or more of total tank volume of fresh water.
3. Remove the priming cap at the top of the delivery port on the pump. Fill pump body with water and refit priming cap tightly.
4. See engine section. Start the engine at the lowest revs possible and then gradually increase revs until the full operating speed is reached.
5. Allow up to 3 minutes to prime.
6. Uncoil the spray hose near your target and open the lever operated valve on the spray gun to commence spot spraying.
7. Adjust the lever position on the gun and also the engine speed to raise or lower the spray rate to suit application. The fan angle of the spray is also adjustable on the gun by rotating the nozzle.

IMPORTANT: Never attempt to operate pump without priming first. Extended dry operation will destroy pump seal. If pump has been run dry, stop the engine immediately and allow it to cool before adding priming water.

NOTE: Refer to your chemical manufacturer's information for determining appropriate spray rates and water mixtures.

Flushing

The following information is provided as a general guide for flushing your Fire Fighter after operation.

For more specific information regarding flushing, and decontamination, specific to the products that you are applying, it is recommended that you consult the chemical label or your chemical supplier.


1. Turn pump off.
2. Drain main tank by opening drain valve.
3. Add a quantity of fresh water to main tank and allow to exit through drain.
4. Close drain valve and add a quantity of fresh water along with decontaminating agents if required to main tank.
5. Turn on pump, and spray fresh water through the spray gun. This will ensure that fresh water has circulated through the pump and gun.
6. Drain remaining contents of fresh water and then re-close drain valve. The unit is now ready for storage.

Storage


If the Fire Fighter is to be stored for a long period of time without use, there are several tasks that need to be performed.

1. Clean the Fire Fighter thoroughly as described under 'Flushing' section.
2. Store the unit out of direct sunlight and where it will not be affected by frosts.
3. Ensure that the main tank is empty.
4. Protect hoses and electrical connections .

Fire Fighter 450-800L Assembly

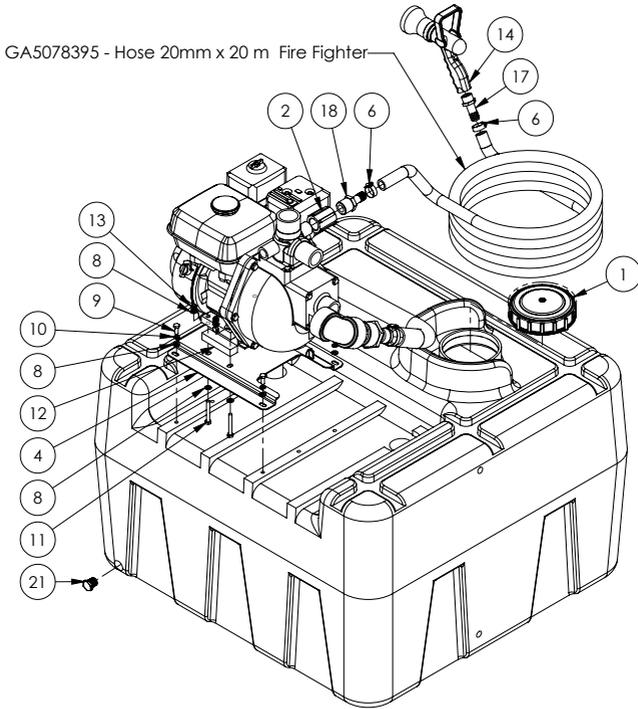

450L TANK SHOWN

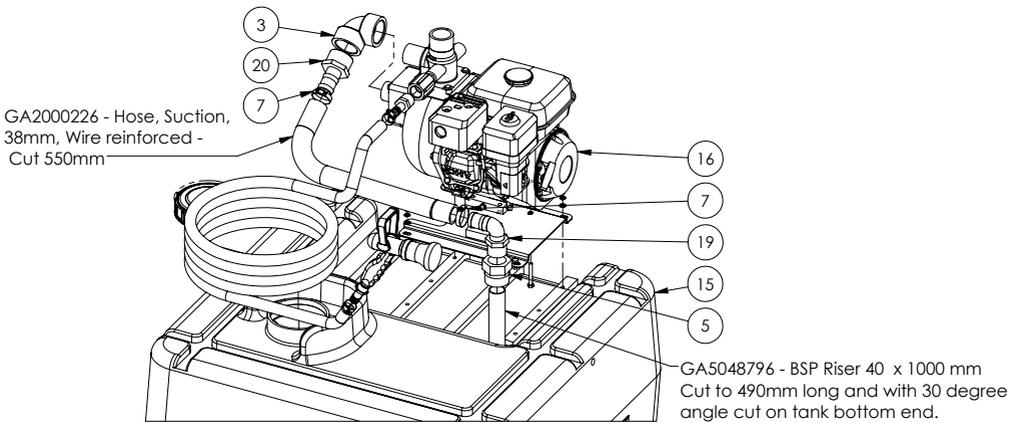

Continued over page


Fire Fighter 450-800L Assembly

Pos.	Part No.	Description	Qty.
-	GA5078395	Hose 20 mm x 20 m, Fire Fighter	1
-	GA2000226	Hose, Suction, 38mm, Wire reinforced	1
-	GA5048796	Riser, BSP, 40 x 1000 mm	1
1	GA5076883	Small Lid, 6", with spring breather and seal	1
2	GA5077638	Coupling, socket, 1" female thread	1
3	GA5077659	Street elbow, 90 degree, 2" female thread x 2" female thread	1
4	GA4534680	Spray Pump mount suit 400L - 800L skid base	1
5	GA4582510	Reducer bush 2" M to 1 1/2" F suit skid base tank	1
6	GA5000999	Hose clamp, 3/4" SS (16-27/12W)	2
7	GA5002873	Hose Clamp, 1 1/2" SS (32-50/12W)	2
8	GA5003651	Washer 8mm Flat SS	12
9	GA5004085	Bolt M8 x 20 GR8.8 ZP	4
10	GA5004919	Washer 8mm Spring SS	4
11	GA5011489	Bolt M8 x 60 GR8.8 ZP	4
12	GA5022210	Spacer plastic white 100 x 25 x 20 mm	2
13	GA5052590	Nut M8 Nyloc SS	4
14	GA5052655	Nozzle, Fire hose, Lever action shut off, Adjustable stream fan / jet	1
15	GA5061087	Tank 450 L Skid Base Cartage Clear	1
	GA5061093	Tank 800 L Skid Base Cartage Clear	1
16	GA5071605	Fire Fighting Pump, Aussie Honda GX160 Combo, 2" Suction, 1 1/2" and 2 x 1" outlets, Fire Chief	1
17	GA5077709	Hose barb, Straight, 3/4" male thread x 3/4" hose	1
18	GA5077721	Hose barb, Straight, 1" male thread x 3/4" hose	1
19	GA5077736	Hose barb, Elbow, 90 degree, 1 1/2" male thread x 1 1/2" hose	1
20	GA5077739	Hose barb, Straight, 2" male thread x 1 1/2" hose	1
21	GA5077943	Plug, 1/2" male thread	1

Notes

Notes

Notes

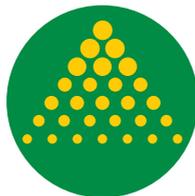

GOLDACRES

1-3 Morang Crescent, Mitchell Park Vic 3355

P: 03 5342 6399 F: 03 5342 6308

info@goldacres.com.au

goldacres.com.au